APRILIA FUTURA

Adjusting the instrument light brightness

Before switching on the ignition, **turn the lights to 'on'** and switch them to **dip**. Then turn the **key to the on** position and, within three seconds, **press the Set** button to toggle between the three settings - 100%, 60% and 25%. If you're too late, you'll be switching between total mileage and trip mileage. If this is the case, switch off and try again.

Aprilia Futura – Setting the clock

With the **ignition on**, press and **hold the MODE** button **until** the **'hours'** segment of the clock **flashes** on and off. Release the Mode button and use the **SET** key to set the hour.

Then press the **Mode key to confirm** and the minutes will flash. Set the minutes using the **SET** key in the same way as before.

To **confirm** the minutes setting, press the **MODE** key and you're done.

Aprilia Futura – Re-setting the service light

The Service light (or rather, LCD Display) comes on whenever a service is due. If you have your bike dealer serviced it should be done for you, but in any case, it's easy enough to reset the light yourself.

Here's a step by step guide to re-setting it.

- Remove the seat.
- On the right hand side (as you face the bars) near the battery you will find two connectors. One each, male and female. The female connector has two grey wires and the male has a blue/green wire. Connecting these two together puts the onboard computer into **diagnostic mode**. Connect these together, noting their original position for later.
- Turn on the ignition (don't start the engine).
- On the right hand instrument panel, "EFI" will now display above the MODE button.
- Press and hold the MODE button.
- While still pressing the MODE button, press and hold the SET button.
- **Keep both buttons pressed** until the "Service" indicator disappears (seems like a long time, 10+ seconds).
- Turn off the ignition.
- **Disconnect the diagnostic connectors** and place them in their original position.
- Turn ignition back on to verify "SERVICE" indicator is out and panel displays normally.
- Replace seat.